



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :







26/12/2022

Last update date (dd/mm/yyyy) :

26/12/2022

| | | | |
|---|---------------------|---|---|
| 1 | General information | Supplier's name or trade mark | INSPIRE |
| 2 | | Supplier's address | ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN |
| 3 | | Model Identifier - Luminaire Supplier reference | HT-FP 10W/HT-FP 30W/HT-FP 50W |
| 4 | | Light sources maker model | HT-FP 10W/HT-FP 30W/HT-FP 50W |

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

| | Explanation of the step | Pictures | Tools |
|--------|--|---|-------------------|
| Step 1 | Using the cross screwdriver to remove screws securing the cover. |  | Cross screwdriver |
| Step 2 | Removing the glass plate by hand, then taking the shell off. |  | By hand |
| Step 3 | Unscrew the screws at both ends of the PCB with a cross screwdriver |  | Cross screwdriver |
| Step 4 | Remove the bracket by unscrewing the screws at both ends of the bracket with an adjustable wrench. |  | Adjustable wrench |
| Step 5 | Remove the connector with a adjustable wrench and take the wire out. |  | Adjustable wrench |
| Step 6 | Complete dismantling |  | By hand |