LIGHT SOURCE REMOVING INSTRUCTION			Creation date (dd/mm/yyyy):	29/09/2022
			Last up date date (dd/mm/yyyy):	29/09/2022
1	formation	Supplier's name or trade mark	ADEO Services	
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	ত্ৰ Model Identifier - Luminaire Supplier reference		7530R-2K	
4	G.	Light sources maker model	TL7530R	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Loosen the eight screws on the back of the lamp body with a screwdriver Take out the reflector of the lamp cover	A CONTROL OF THE PARTY OF THE P	screwdriver
Step 2	Loosen the LN terminal screw with a screwdriver and pull out the LN electronic wire 2. Use a screwdriver to loosen the ground wire screw and the three electronic wires of the sensor		screwdriver
Step 3	Use a screwdriver to loosen the lock light board screws Take out the light board		screwdriver
Step 4			
Step 5			
Step 6			
Step 7			