



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

29/09/2022

Last update date (dd/mm/yyyy) :

29/09/2022

1	General information	Supplier's name or trade mark	ADEO Services
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	7550R-2K
4		Light sources maker model	TL7550R

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	<ol style="list-style-type: none"> Loosen the eight screws on the back of the lamp body with a screwdriver Take out the reflector of the lamp cover 		screwdriver
Step 2	<ol style="list-style-type: none"> Loosen the LN terminal screw with a screwdriver and pull out the LN electronic wire Use a screwdriver to loosen the ground wire screw and the three electronic wires of the sensor 		screwdriver
Step 3	<ol style="list-style-type: none"> Use a screwdriver to loosen the lock light board screws Take out the light board 		screwdriver
Step 4			
Step 5			
Step 6			
Step 7			