



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

26/12/2022

Last update date (dd/mm/yyyy) :

26/12/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	FOGGY 30W PIR
4		Light sources maker model	FOGGY 30W PIR

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Use a cross screwdriver to remove the four screws from the back cover.		Cross screwdriver
Step 2	Use a cross screwdriver to remove the two long screws holding the light control and the screws attaching the face cover, then remove the face cover.		Cross screwdriver
Step 3	Use a cross screwdriver to remove the screws locking the hood and crimp clips respectively, then remove the hood and crimp clips.		Cross screwdriver
Step 4	Use a cross screwdriver to remove the two screws that lock the drive.		Cross screwdriver
Step 5	Press and unplug the five wires connected in the driver by hand and separate the driver, light controller from the lamp body.		By hand
Step 6	Use a cross screwdriver to remove the screws locking the dimmer plate, then remove the dimmer plate.		Cross screwdriver
Step 7	Remove the aluminium substrate with tweezers.		Tweezer