




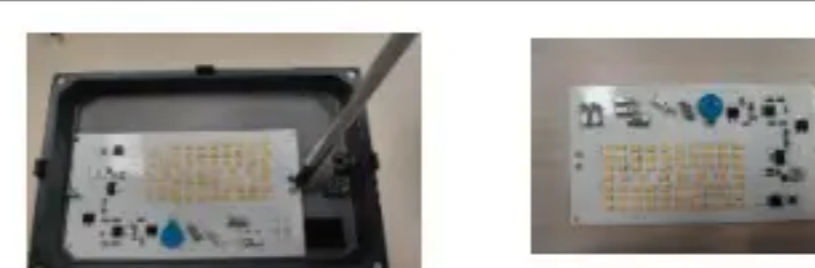


1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001. 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	<i>BD05C-YON-10-G, BD05C-YON-20-G, BD05C-YON-30-G, BD05C-YON-50-G, BD05C-YON-100-G, BD05C-YON-20-W, BD05C-YON-30-W, BD05C-YON-50-W</i>
4		Light sources maker model	<i>BD05C-YON-10-G, BD05C-YON-20-G, BD05C-YON-30-G, BD05C-YON-50-G, BD05C-YON-100-G, BD05C-YON-20-W, BD05C-YON-30-W, BD05C-YON-50-W</i>

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Using the cross screwdriver to remove screws securing the cover.		Cross screwdriver
Step 2	Removing the glass plate by hand, then taking the silicone ring off.		By hand
Step 3	Remove the reflector, then press down on the PC cover with both hands to make it fall off.		By hand
Step 4	Using an adjustable wrench to remove the connection between the waterproof connector and the shell.		Adjustable wrench
Step 5	Using an Allen wrench to remove the bracket.		Allen wrench
Step 6	Using a cross screwdriver to remove the light source board		Cross screwdriver