



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

29/09/2022

Last update date (dd/mm/yyyy) :

29/09/2022

1	General information	Supplier's name or trade mark	ADEO Services
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	OS-ALGOA-2
4		Light sources maker model	TL1607PD with TL1607P

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	<ol style="list-style-type: none"> 1. Use a screwdriver to loosen the screw that secures the drive box 2. Use a screwdriver to loosen a screw that locks the ground wire 		screwdriver
Step 2	<ol style="list-style-type: none"> 1. Use a screwdriver to loosen the two screws that lock the lamp head 2. Take out the part of the lamp head 		screwdriver
Step 3	<ol style="list-style-type: none"> 1. Use a screwdriver to loosen the four screws that lock the decorative frame of the lamp head 2. Take out the lamp frame 		screwdriver
Step 4	<ol style="list-style-type: none"> 1. Use a screwdriver to loosen the four screws that lock the lamp cover 2. Remove the lamp cover 		screwdriver
Step 5	<ol style="list-style-type: none"> 1. Loosen the 8 screws of the glare cover with a screwdriver 2. Take out the glare cover and diffuser cover 		screwdriver
Step 6	<ol style="list-style-type: none"> 1. Loosen the four screws of the junction box with a screwdriver 2. Take off the top cover of the junction box 		screwdriver
Step 7	<ol style="list-style-type: none"> 1. Loosen the screw of the LN terminal with a screwdriver, and pull out the two LN electronic wires. 2. Pull out the terminal of the light board connecting wire by hand 		screwdriver