1 adeo QUALITY		LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy): 29/09/202	22
_	12   20	LITY	Last up date date (dd/mm/yyyy): 29/09/202	22
1	ıformation	Supplier's name or trade mark	ADEO Services	
		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	eralin	Model Identifier - Luminaire Supplier reference	OS-ALGOA-2PIR	
4	Gen	Light sources maker model	TL1607PD with TL1607P-2	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	1. Use a screwdriver to loosen the screw that secures the drive box 2. Use a screwdriver to loosen a screw that locks the ground wire		screwdriver
Step 2	1. Use a screwdriver to loosen the two screws that lock the lamp head 2. Take out the part of the lamp head		screwdriver
	Use a screwdriver to loosen the four screws that lock the decorative frame of the lamp head     Take out the lamp frame		screwdriver
Step 4	Use a screwdriver to loosen the four screws that lock the lamp cover     Remove the lamp cover		screwdriver
Step 5	Loosen the 8 screws of the glare cover with a screwdriver     Take out the glare cover and diffuser cover		screwdriver
Step 6	Loosen the four screws of the junction box with a screwdriver     Take off the top cover of the junction box		screwdriver
	Loosen the screw of the LN terminal with a screwdriver, and pull out the two LN electronic wires.     Pull out the terminal of the light board connecting wire by hand		screwdriver