^		LIGHT SOURCE REMOVING INSTRUCTION	Creation date (dd/mm/yyyy): 24/9/2	2022
_	A QU	ALITY	Last update date (dd/mm/yyyy) : 24/9/2	2022
1	tion	Supplier's name or trade mark	INSPIRE	
2	forma	Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN	
3	General in	Model Identifier - Luminaire Supplier reference	5618007125	
4		Light sources maker model	5618007125M	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Use a cross screwdriver to unscrew the screw, pull the cloth belt to remove the plastic plate, and remove the connector		Screwdrvier - Crosshead
Step 2	Take out the screw silicone plug cover, unscrew the screws with a cross screwdriver, and take out the diffuser		Screwdrvier - Crosshead
Step 3	Use a cross screwdriver to unscrew the screw and remove the ground wire; Use a hex wrench to unscrew the screws and remove the base		Screwdrvier - Crosshead
Step 4	Use a cross screwdriver to unscrew the screws, pull out the LED MODULE, remove the connector, and take out the LED and the driver module		Screwdrvier - Crosshead
Step 5	LED Module, driver module		
Step 6			
Step 7			
Step 8			