



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

15/09/2022

Last update date (dd/mm/yyyy) :

15/09/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	GB8345RDSN2740K-1
4		Light sources maker model	GB8345RDSN2740K-1

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Remove the DC pair plug.		By hand
Step 2	Remove the spring.		By hand
Step 3	Pry the heat sink from the joint using a flat-head screwdriver.		Flat-head screwdriver
Step 4	Remove reflective cups and foam.		By hand
Step 5	Remove wires using soldering iron.		Soldering iron
Step 6	Flat-head screwdriver pry LED PCB.		Flat-head screwdriver
Step 7	Light source assembly display.		By hand