



## LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :







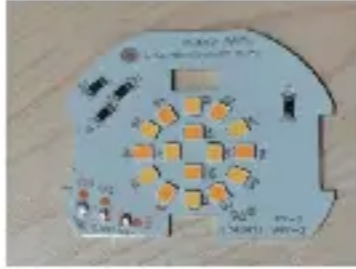
15/09/2022

Last update date (dd/mm/yyyy) :

15/09/2022

|   |                     |   |   |
|---|---------------------|---|---|
| 1 | General information | Supplier's name or trade mark                   | INSPIRE   |
| 2 |                     | Supplier's address                              | ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN |
| 3 |                     | Model Identifier - Luminaire Supplier reference | GB8345SQBK2740K-1   |
| 4 |                     | Light sources maker model                       | GB8345SQBK2740K-1   |

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

|               | Explanation of the step   | Pictures  | Tools                 |
|---------------|---|---|-----------------------|
| <b>Step 1</b> | Remove the DC pair plug.  |   | By hand               |
| <b>Step 2</b> | Remove the spring.  |  | By hand               |
| <b>Step 3</b> | Pry the heat sink from the joint using a flat-head screwdriver. |  | Flat-head screwdriver |
| <b>Step 4</b> | Remove reflective cups and foam.                                |  | By hand               |
| <b>Step 5</b> | Remove wires using soldering iron.                              |  | Soldering iron        |
| <b>Step 6</b> | Flat-head screwdriver pry LED PCB.                              |  | Flat-head screwdriver |
| <b>Step 7</b> | Light source assembly display.                                  |  | By hand               |