

## LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :



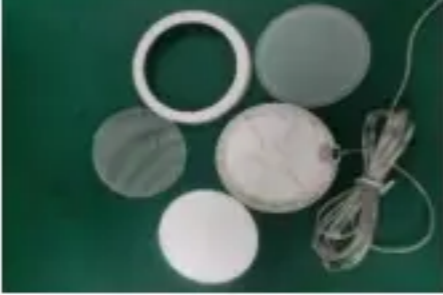


01/11/2022

Last update date (dd/mm/yyyy) :

01/11/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	2101F-BK; 2101F-WH
4		Light sources maker model	2101F

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
<b>Step 1</b>	The whole product		
<b>Step 2</b>	Pry off the light cover with a slotted screwdriver		slotted screwdriver
<b>Step 3</b>	Remove the light cover, light guide plate and reflective paper		
<b>Step 4</b>	Weld down the light source module with an electric soldering iron		electric soldering iron
<b>Step 5</b>	The light source		
<b>Step 6</b>			
<b>Step 7</b>			
<b>Step 8</b>			
<b>Step 9</b>			
<b>Step 10</b>			