



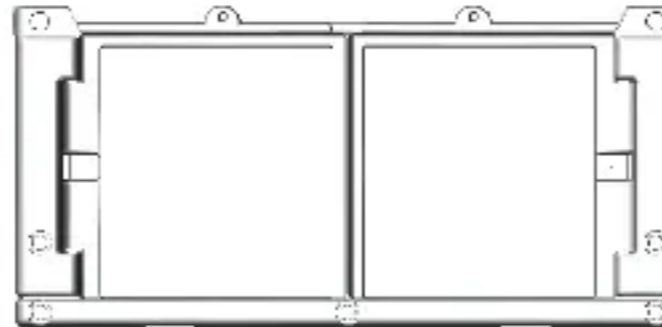



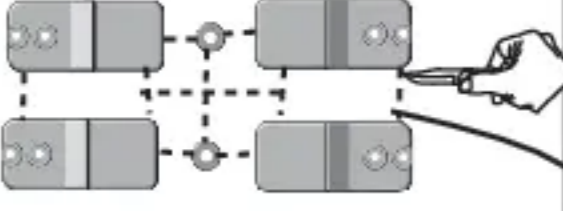


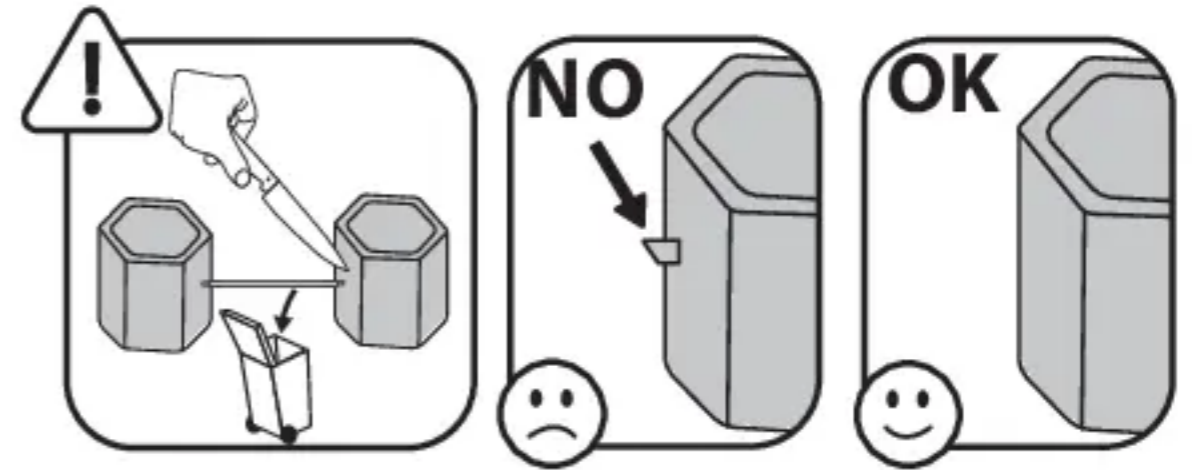



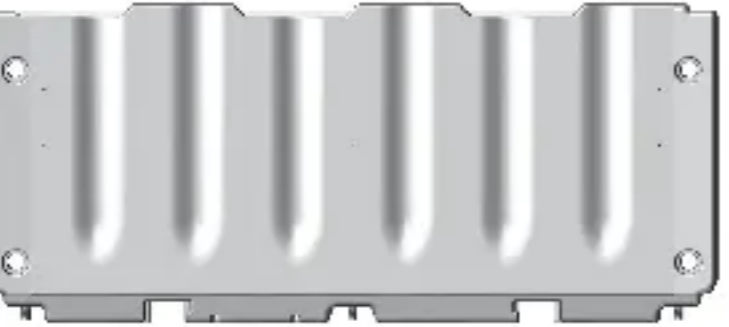



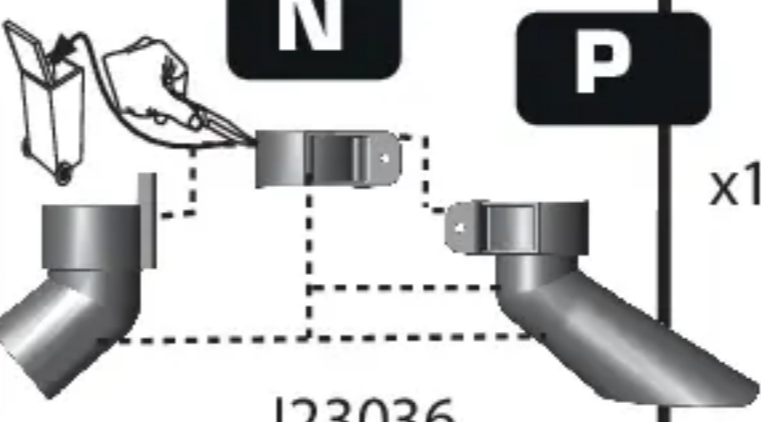

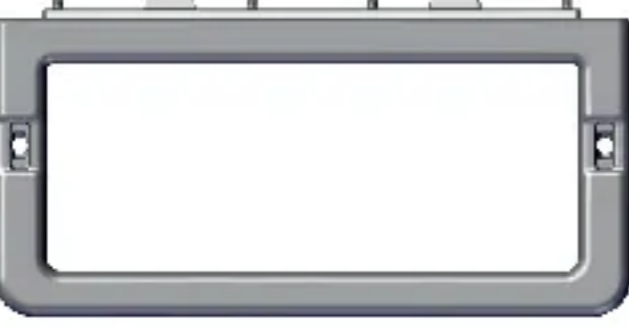

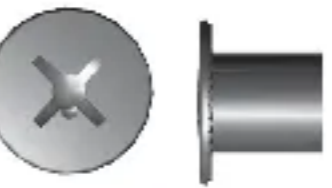






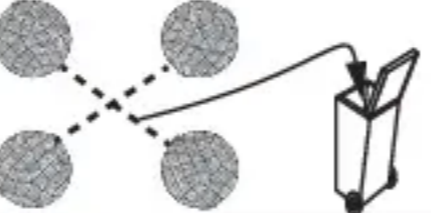

Smoby

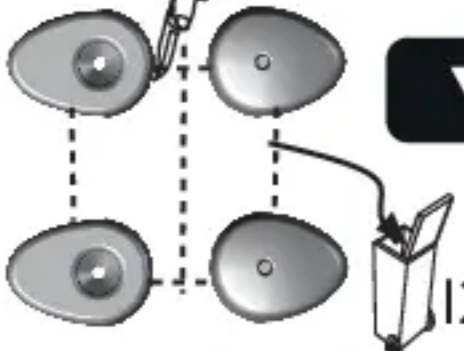F •Outils non fournis
 GB •Tools not provided.
 D •Werkzeug nicht inbegriffen
 NL •Gereedschap niet inbegrepen
 E •Herramientas no incluidas
 P •Ferramentas não fomecidas.
 I •Utensili non forniti
 DK •Værktøj medfølger ikke.
 S •Verktyg ingår inte.
 FIN •Ei sisällä työkaluja
 N •Verktøy følger ikke med
 H •A szerszámok nem tartozéka a terméknek.
 CZ •Nářadí není součástí dodávky
 SK •Náradie nie je súčasťou dodávky

PL •Narzędzia niedostarczone w zestawie.
 BG •Инструменти не са предоставени.
 RO •Scule neincluse
 GR •Τα εργαλεία δεν περιλαμβάνονται
 SI •Orodje ni priloženo.
 HRV •Alati se ne isporučuju
 TR •Ürünle dahil değildir
 RUS •Инструменты не поставляются.
 UA •Інструменти не входять у комплект
 ET •Tööriistu ei ole kaasas.
 LT •Įrankių komplekte nėra
 LV •Rīki komplektā nav ietverti.

•AR الأدوات غير مُرفقة مع المنتج.

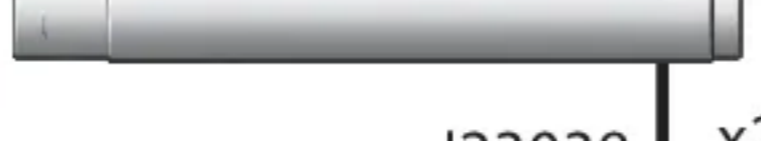

A		x2	H		x2	T		I23023	x2
B		x2	I		x2	U		I23037	x1
C		x2	J		x1	W		I23040	x2
D		x2	K		x2	Z		I13007	x1
E		x2	L		x1	AA		S23006	x4
F		x4	M		x1	AB		AAK0527	x4
G		x2	N		x1	AC		I17019	x36
			P		x1	AD		Ø 4,5x20 AAK0401	x25
			Q		x3	AE		Ø 6x20 AAK0414	x12
			R		x2	S		I2299900	x1
AF		x2	AG		x8				