



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :

















24/09/2021

Last update date (dd/mm/yyyy) :

24/09/2021

| | | | |
|---|---------------------|---|--|
| 1 | General information | Supplier's name or trade mark | INSPIRE |
| 2 | | Supplier's address | ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN |
| 3 | | Model Identifier - Luminaire Supplier reference | NTL014PIR-LI |
| 4 | | Light sources maker model | 04NTL014D-01-01E |

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

| | Explanation of the step | Pictures | | Tool |
|--------|--|--|---|---|
| Step 1 | Open with a flat-head screwdriver. |  |  |  |
| Step 2 | Crack the bottom shell with tongs |  |  |  |
| Step 3 | Use a Phillips screwdriver to unscrew the lamp board and pull it out |  |  |  |
| Step 4 | Remove the tin from the lamp board with a tin-stained iron. |  |  |  |
| Step 5 | Install the new indicator board and lock the indicator board with a Phillips screwdriver |  |  |  |
| Step 6 | Use a tin-stained iron to solder the lamp board. |  |  |  |
| Step 7 | Put the lens and the bottom cover in position, and then apply force to the assembly |  |  | |