












1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	BD05C-YON-20-G-2H
4		Light sources maker model	BD05C-YON-20-G-2H

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	Use a cross screwdriver to remove the screws securing the cover.	 	Cross screwdriver
Step 2	Remove the glass plate and silicone ring by hand.	 	By hand
Step 3	Remove the reflector, then press down on the PC cover with both hands to make it fall off.	 	By hand
Step 4	Using a Allen wrench to remove the bracket.		Allen wrench
Step 5	Use tweezers to remove the wire from the terminal block and use an adjustable wrench to remove the waterproof connector.	  	Tweezer, adjustable wrench
Step 6	Using a cross screwdriver to remove the light source board.		Cross screwdriver