



LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :









29/09/2022

Last update date (dd/mm/yyyy) :

29/09/2022

1	General information	Supplier's name or trade mark	ADEO Services
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	7520R-2K
4		Light sources maker model	TL7520R

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	<ol style="list-style-type: none"> 1. Unscrew the wiring middle sleeve on the back of the lamp body by hand. 2. Set the wiring middle sleeve aside 	 	By hand
Step 2	<ol style="list-style-type: none"> 1. Loosen the six screws on the back of the lamp body with a screwdriver 2. Take out the reflector of the lamp cover 	 	screwdriver
Step 3	<ol style="list-style-type: none"> 1. Loosen the LN terminal screw with a screwdriver and pull out the LN electronic wire 2. Use a screwdriver to loosen the ground wire screw and the three electronic wires of the sensor 	 	screwdriver
Step 4	<ol style="list-style-type: none"> 1. Use a screwdriver to loosen the lock light board screws 2. Take out the light board 	 	screwdriver
Step 5			
Step 6			
Step 7			