

LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :


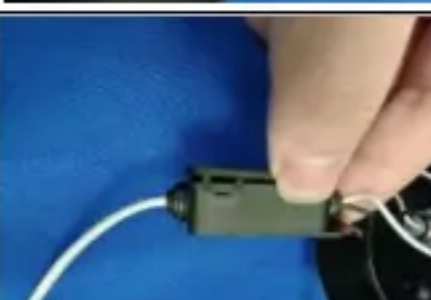





17/10/2022

Last update date (dd/mm/yyyy) :

17/10/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS0001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	<i>5024WH, 5024BK, 5024WH-RU, 5024BK-RU</i>
4		Light sources maker model	<i>5024</i>

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
Step 1	The whole product.		
Step 2	Unscrew the screws on the base.		
Step 3	Unscrew the fixing screws and take out the power supply.		Phillips screwdriver
Step 4	Pry off the lid of the junction box.		
Step 5	Unscrew the screw with a flat screwdriver and take out the wire		flat screwdriver
Step 6	Driver.		
Step 7	Unscrew and remove the lamp cover.		
Step 8	Unscrew the fixing screws on the light board.		Phillips screwdriver
Step 9	Press down on the connector and pinch the sides to remove the light board.		
Step 10	The light source.	