



# LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :








15/09/2022

Last update date (dd/mm/yyyy) :

15/09/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	GB8345RDWH2740K-1
4		Light sources maker model	GB8345RDWH2740K-1

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
<b>Step 1</b>	Remove the DC pair plug.		By hand
<b>Step 2</b>	Remove the spring.		By hand
<b>Step 3</b>	Pry the heat sink from the joint using a flat-head screwdriver.		Flat-head screwdriver
<b>Step 4</b>	Remove reflective cups and foam.		By hand
<b>Step 5</b>	Remove wires using soldering iron.		Soldering iron
<b>Step 6</b>	Flat-head screwdriver pry LED PCB.		Flat-head screwdriver
<b>Step 7</b>	Light source assembly display.		By hand