



## LIGHT SOURCE REMOVING INSTRUCTION

Creation date (dd/mm/yyyy) :









15/09/2022

Last update date (dd/mm/yyyy) :

15/09/2022

1	General information	Supplier's name or trade mark	INSPIRE
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN
3		Model Identifier - Luminaire Supplier reference	JA60A260SQSN2740K-1
4		Light sources maker model	JA60A260SQSN2740K-1

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explanation of the step	Pictures	Tools
<b>Step 1</b>	Remove the spring by hand.	 	By hand
<b>Step 2</b>	Turn the screw counterclockwise with a $\phi 5$ cross screwdriver, Take down the back.	 	$\phi 5$ cross screwdriver
<b>Step 3</b>	Remove the optical element.		By hand
<b>Step 4</b>	Use electric soldering iron to solder the output wire.		Electric soldering iron
<b>Step 5</b>	Remove the light source module from the ring.		By hand
<b>Step 6</b>	Weld the power cord to the light source board (S4+, S3-/B-), Then the light source module is flattened and leveled on the heat dissipation parts under the same heat dissipation conditions as the surface ring.		Electric soldering iron