LIGHT SOURCE REMOVING INSTRUCTION			Creation date (dd/mm/yyyy): 26/	12/2022
			Last update date (dd/mm/yyyy) : 26/	12/2022
1	neral informatio	Supplier's name or trade mark	INSPIRE	
2		Supplier's address	ADEO Services, 135 rue Sadi Carnot - CS00001, 59790 RONCHIN	
3		Model Identifier - Luminaire Supplier reference	FOGGY 30W	
4		Light sources maker model	FOGGY 30W	

Instructions on how to remove lighting control parts and/or non-lighting parts, if any, or how to switch them off or minimise their power consumption during light source testing

	Explaination of the step	Pictures	Tools
Step 1	Use a cross screwdriver to remove the four screws from the back cover.		Cross screwdriver
Step 2	Use a cross screwdriver to remove the screws attaching the face cover,then remove the cover.		Cross screwdriver
Step 3	Use a cross screwdriver to remove the screws locking the hood and crimp clips respectively, then remove the hood and crimp clips.		Cross screwdriver
Step 4	Use a cross screwdriver to remove the two screws that lock the drive.		Cross screwdriver
Step 5	Press and pull out by hand the two wires connected in the driver, then separate the driver from the lamp body.		By hand
Step 6	Use a cross screwdriver to remove the screws locking the dimmer plate,then remove the dimmer plate.		Cross screwdriver
Step 7	Remove the aluminium substrate with tweezer.		Tweezer